

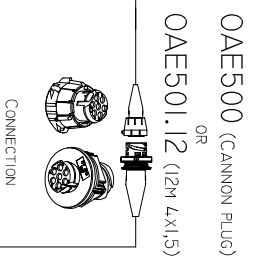
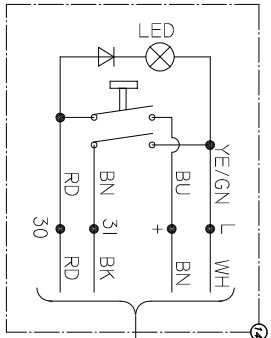
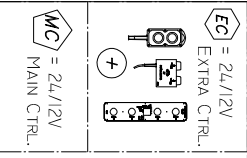
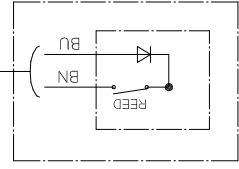
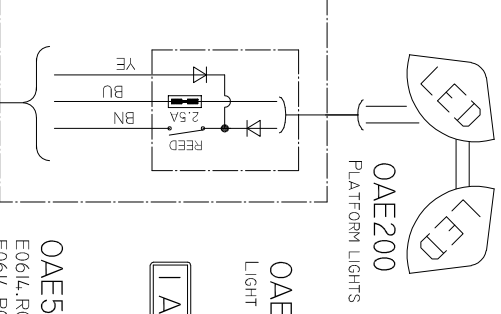
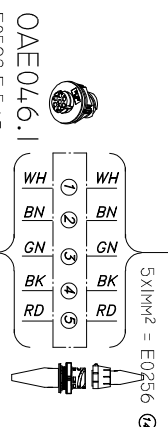
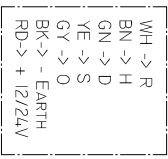



DH-LSP.05 ~ TRUCK + OAE045.LSP.PR + OAE046.1 + OAE046.2 + OAE200 + OAE500 + OAE502 + OAE503

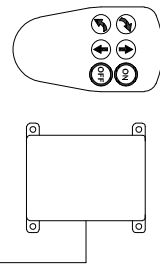

- CHANGE TO HYDR. MODE:
- * SWITCH POWER OFF AT RECEIVER
 - * SWITCH POWER ON AT RECEIVER WITHIN 60 SEC, SWITCH POWER ON AT TRANSMITTER
 - * HOLD BUTTON LIFT + BUTTON ON AND PRESS BUTTON OPEN --> HYDR MODE

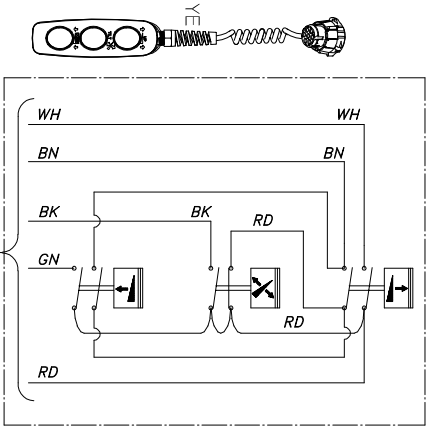

- OAE502
E0614.R,CL.3.L
E0614.R,CL.3.R
E0615.R,CL.3.L
E0615.R,CL.3.R

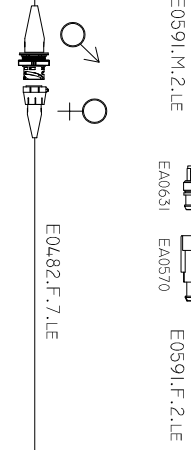

HYDR

+	R + H
-	B + H
+	R + S
-	B + S

CABLE N°	Pos.	CABLE N°	CONNECTION
1	WH	-> R	
2	BN	-> H	
3	GN	-> D	
4	RD	-> +24/12V EC	
5	BK	-> - EARTH	
6	BU	-> +24/12V (OAE200)	
7	GY	-> WH EARTH OF OAE500	

