


MM.9.F09.S- Mounting instructions

Ford Transit 2014


RWD | Single Wheel | **WB=ALL** | **OV=ALL**

Ford Transit 2014


RWD | Double Wheel | **WB=ALL** | **OV=ALL**

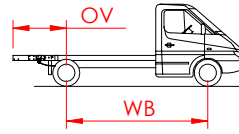


Ref	Bolts	QTY
1	M12x1.5 DIN6921 - 100mm	14
2	M10 DIN6921 - 40mm	6
3	M14x1.5 DIN6921 - 40mm	8

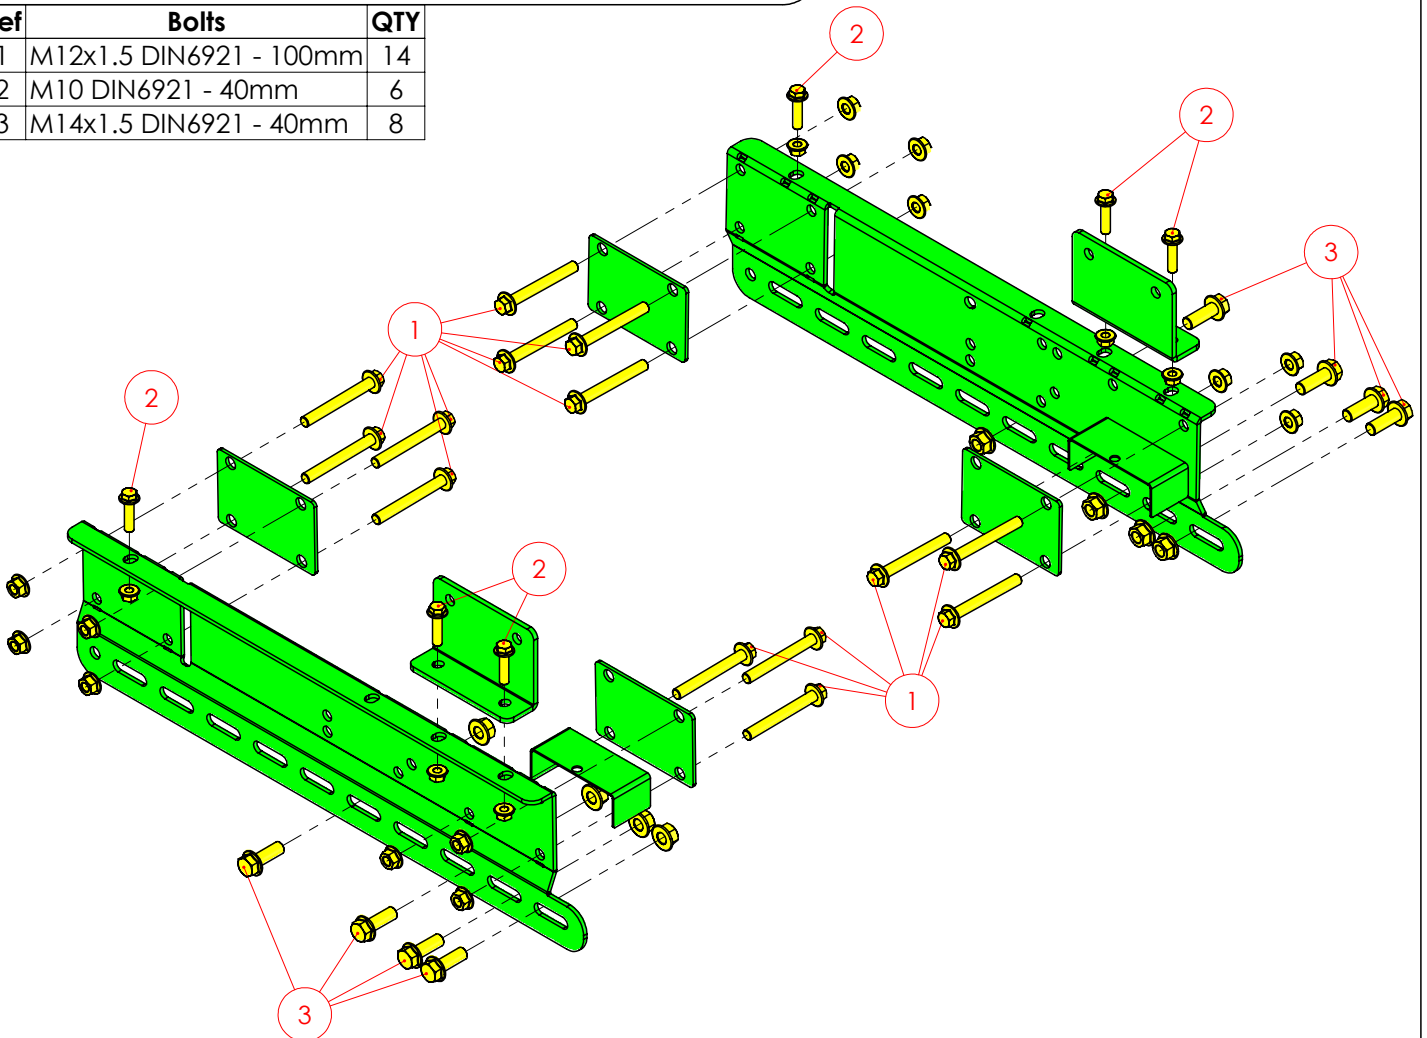


STEP 1

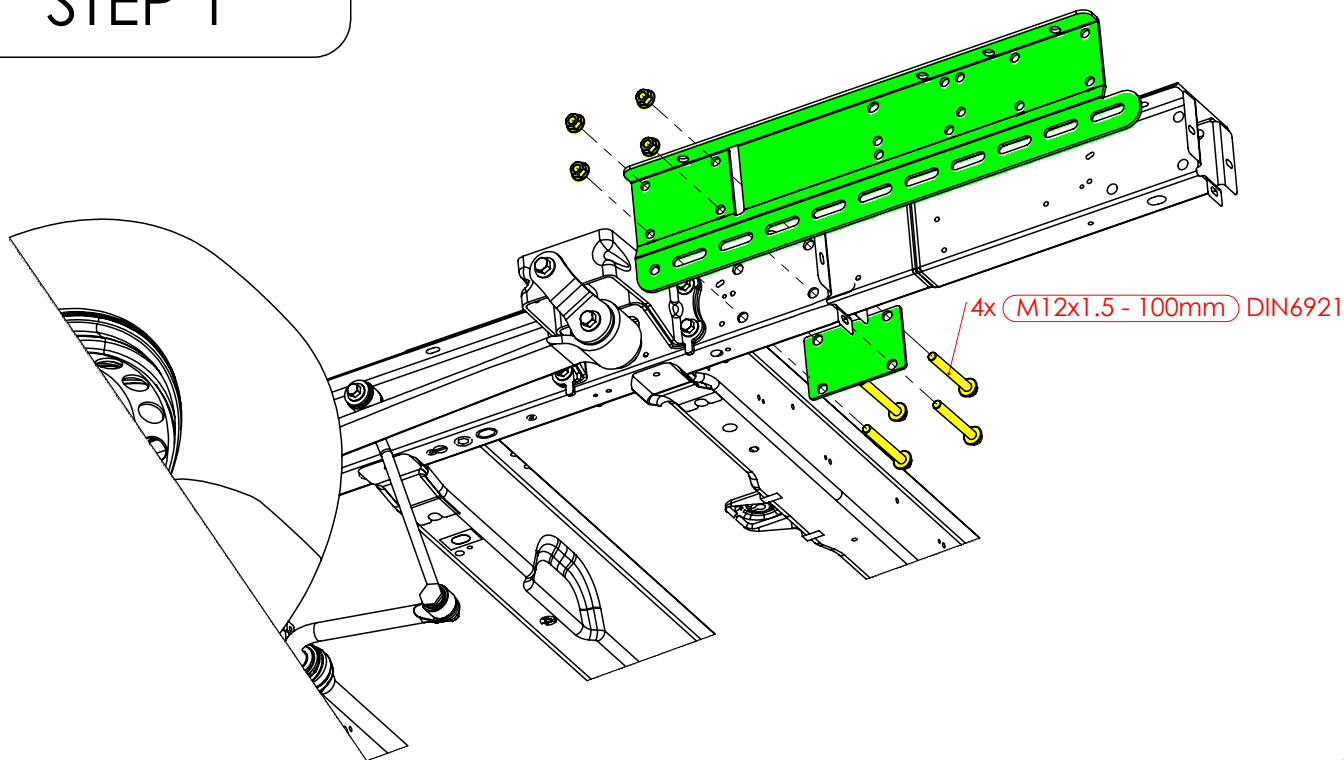


STEP 2

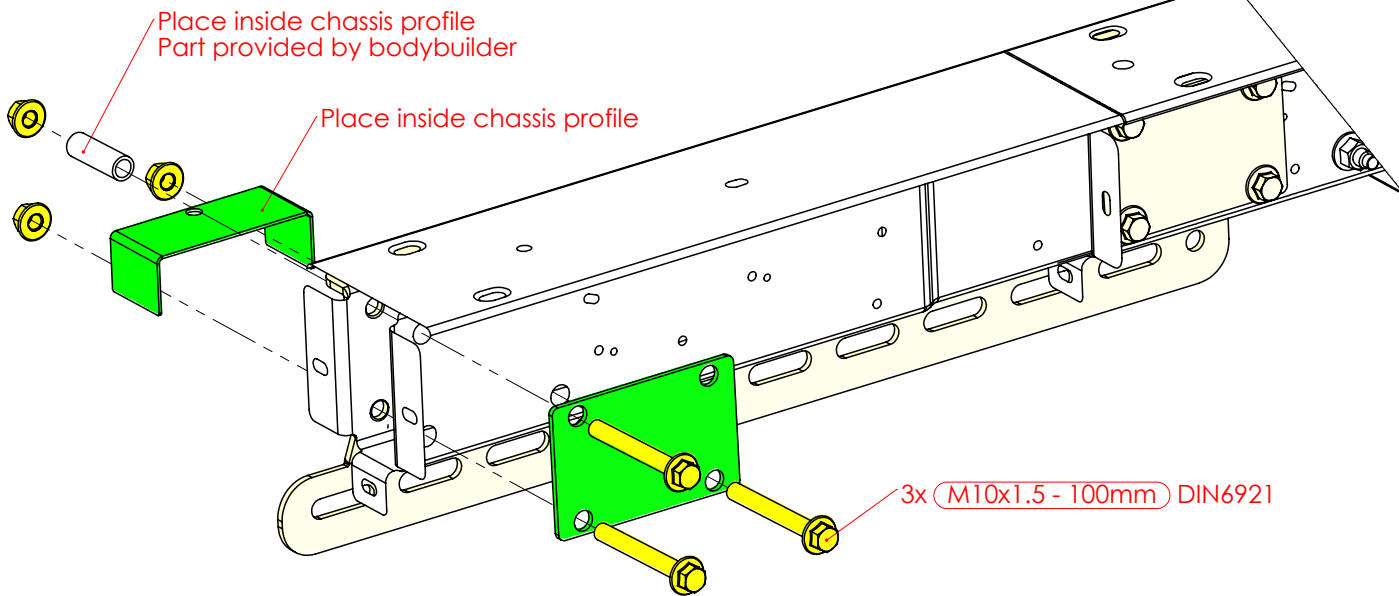

STEP 3

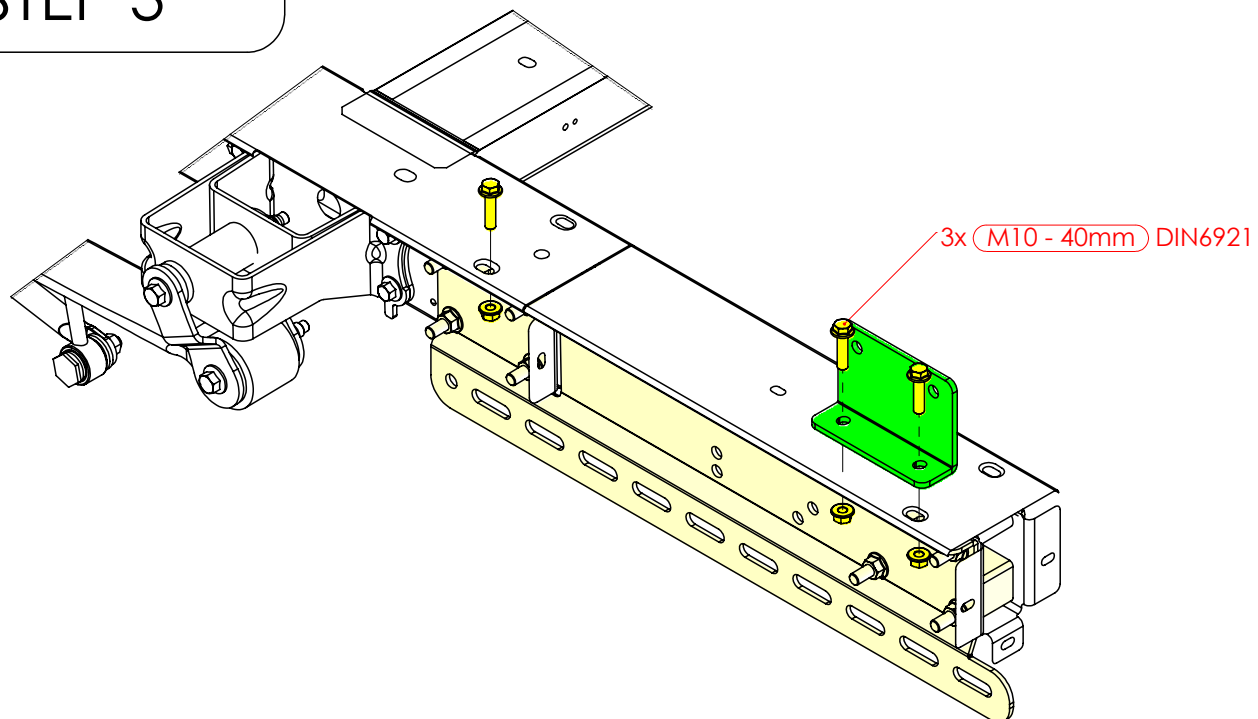


STEP 4

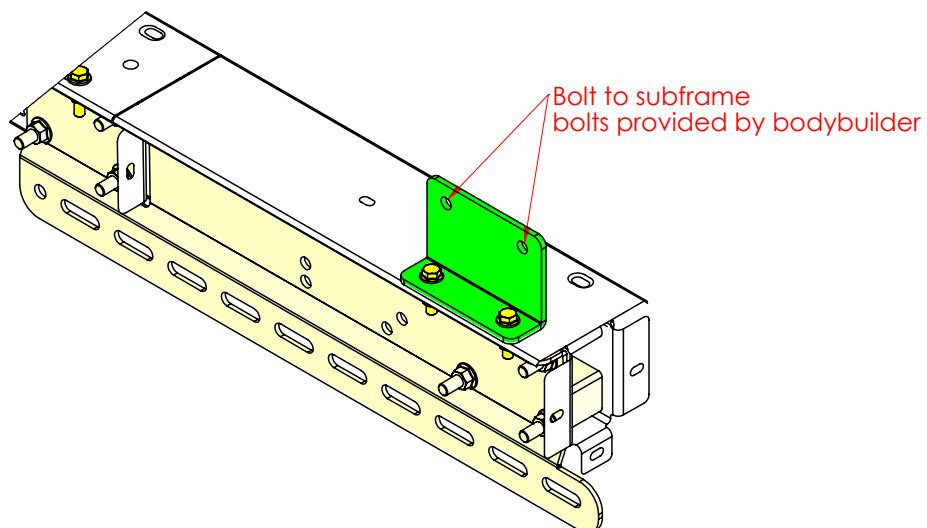

STEP 5


Lift mounted on the OUTSIDE of the mounting plates

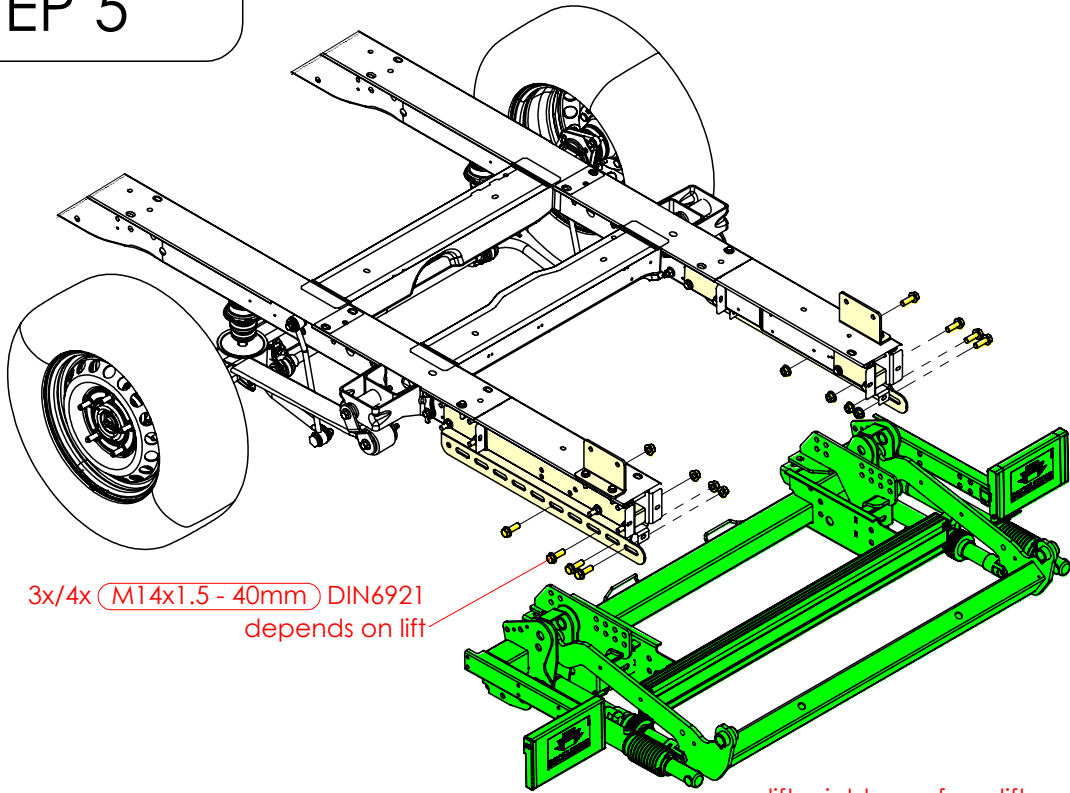

3x/4x (M14x1.5 - 40mm) DIN6921
depends on lift

lift might vary from lift on drawing

Overview

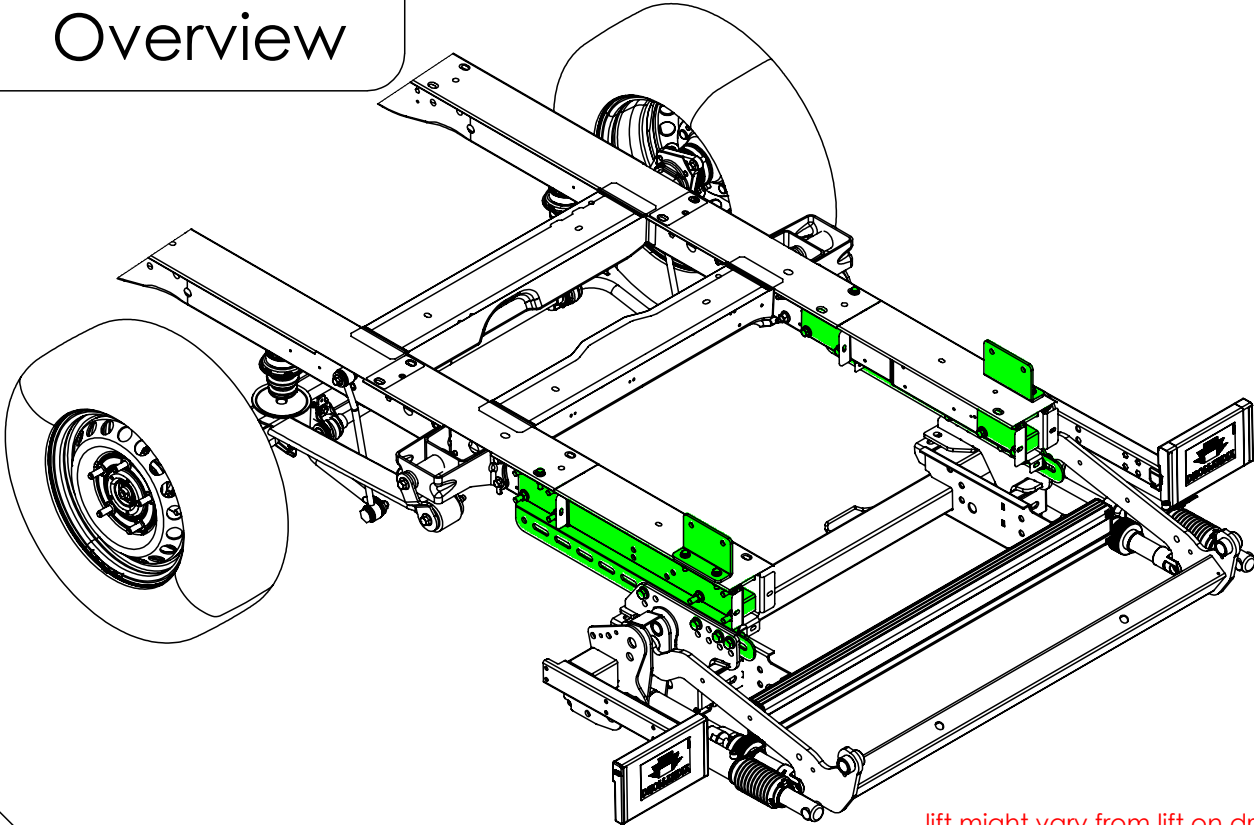

lift might vary from lift on drawing

